

Factory Parts Catalog

Product No.	E30DF74GPS2
	30366373P70S2
Series	30" dual fuel
Color	stainless
Market	North America
Wiring Diagram	318271962
Owner's Guide	318203954
Installation Instructions	318201773
Service Data Sheet	318204802



Electrolux Major Appliances
North & Latin America
P.O. BOX 212378
AUGUSTA, GA 30917


Publication No.
5995502704
07/10/23
(EN/SERVICE/BJH)
377

30-INCH FREE STANDING DUAL FUEL RANGE

Model No.
E30DF74G

Copyright © 2007 Electrolux Home Products, Inc.
All rights reserved.

BACKGUARD

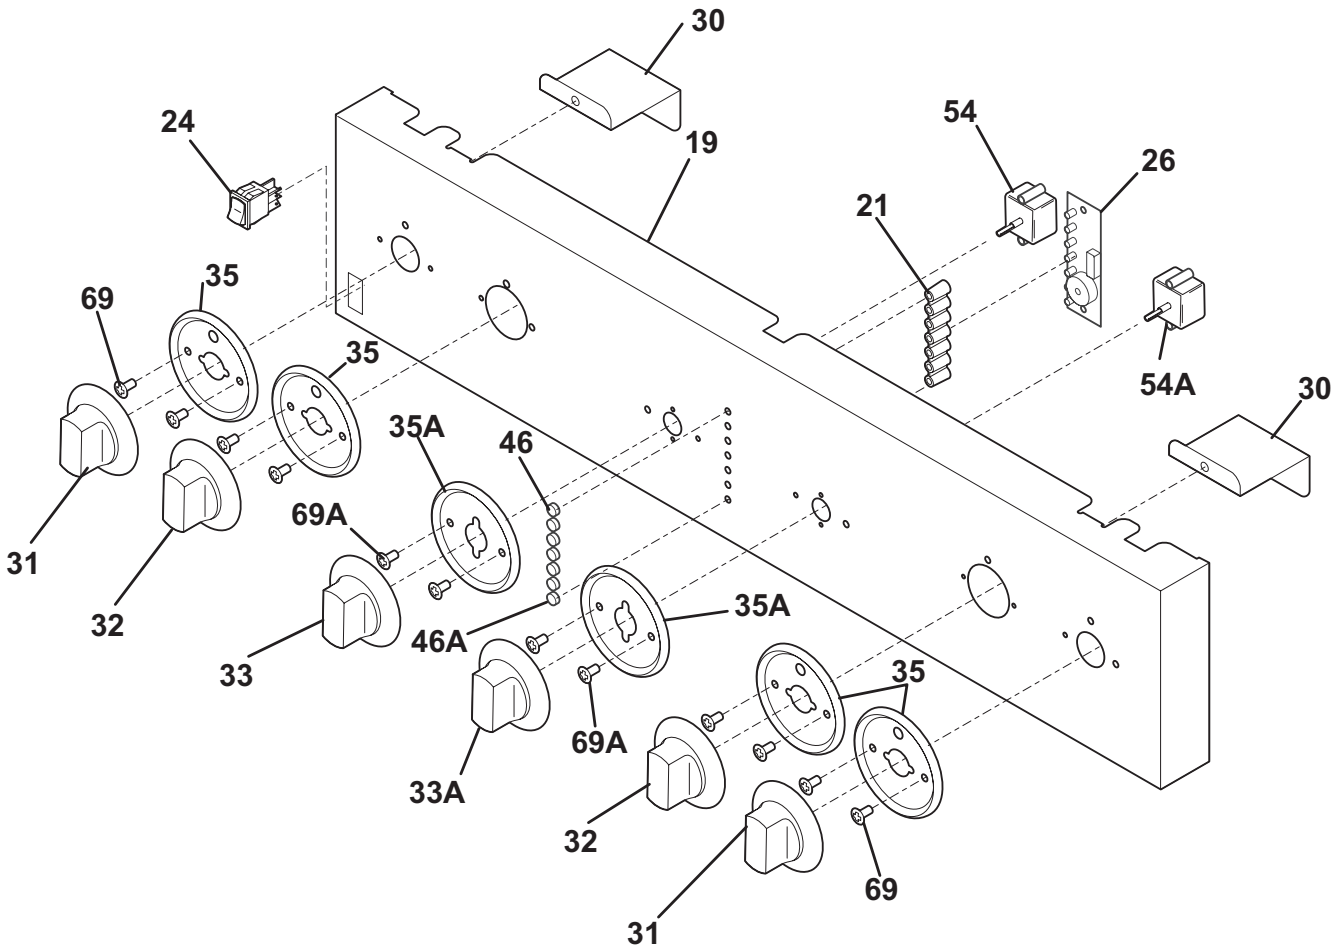


CE30DF74GPS2

BACKGUARD

POS. NO	PART NO.	DESCRIPTION
19	318285722	Panel, control, stainless
21	318389500	Retainer, lens
24 #	5308015487	Switch, oven light, rocker
26 #	5304452799	Board, indicator light, (2), LED
30	318377000	Support, control panel, (2)
31	318242225	Knob, control, (2)
32	318242226	Knob, control, dual, (2)
33	318242230	Knob, selector
33A	318242231	Knob, control, oven
35	318251911	Skirt, (4)
35A	318251912	Skirt, (2)
46	318044501	Lens, indicator light, blue, (5)
46A	318228310	Lens, indicator light, (2)
54 #	5304452797	Control, oven selector
54A#	5304452798	Control, oven temp.
69	5303300265	Screw, 8-18 X 1/2, (4)
69A	5304453707	Screw, control mtg.
* #	318370352	Wiring Harness, timer, to relay board
* #	318370353	Wiring Harness, relay board, to display
*	318163602	Cleaner, stainless steel

BURNER

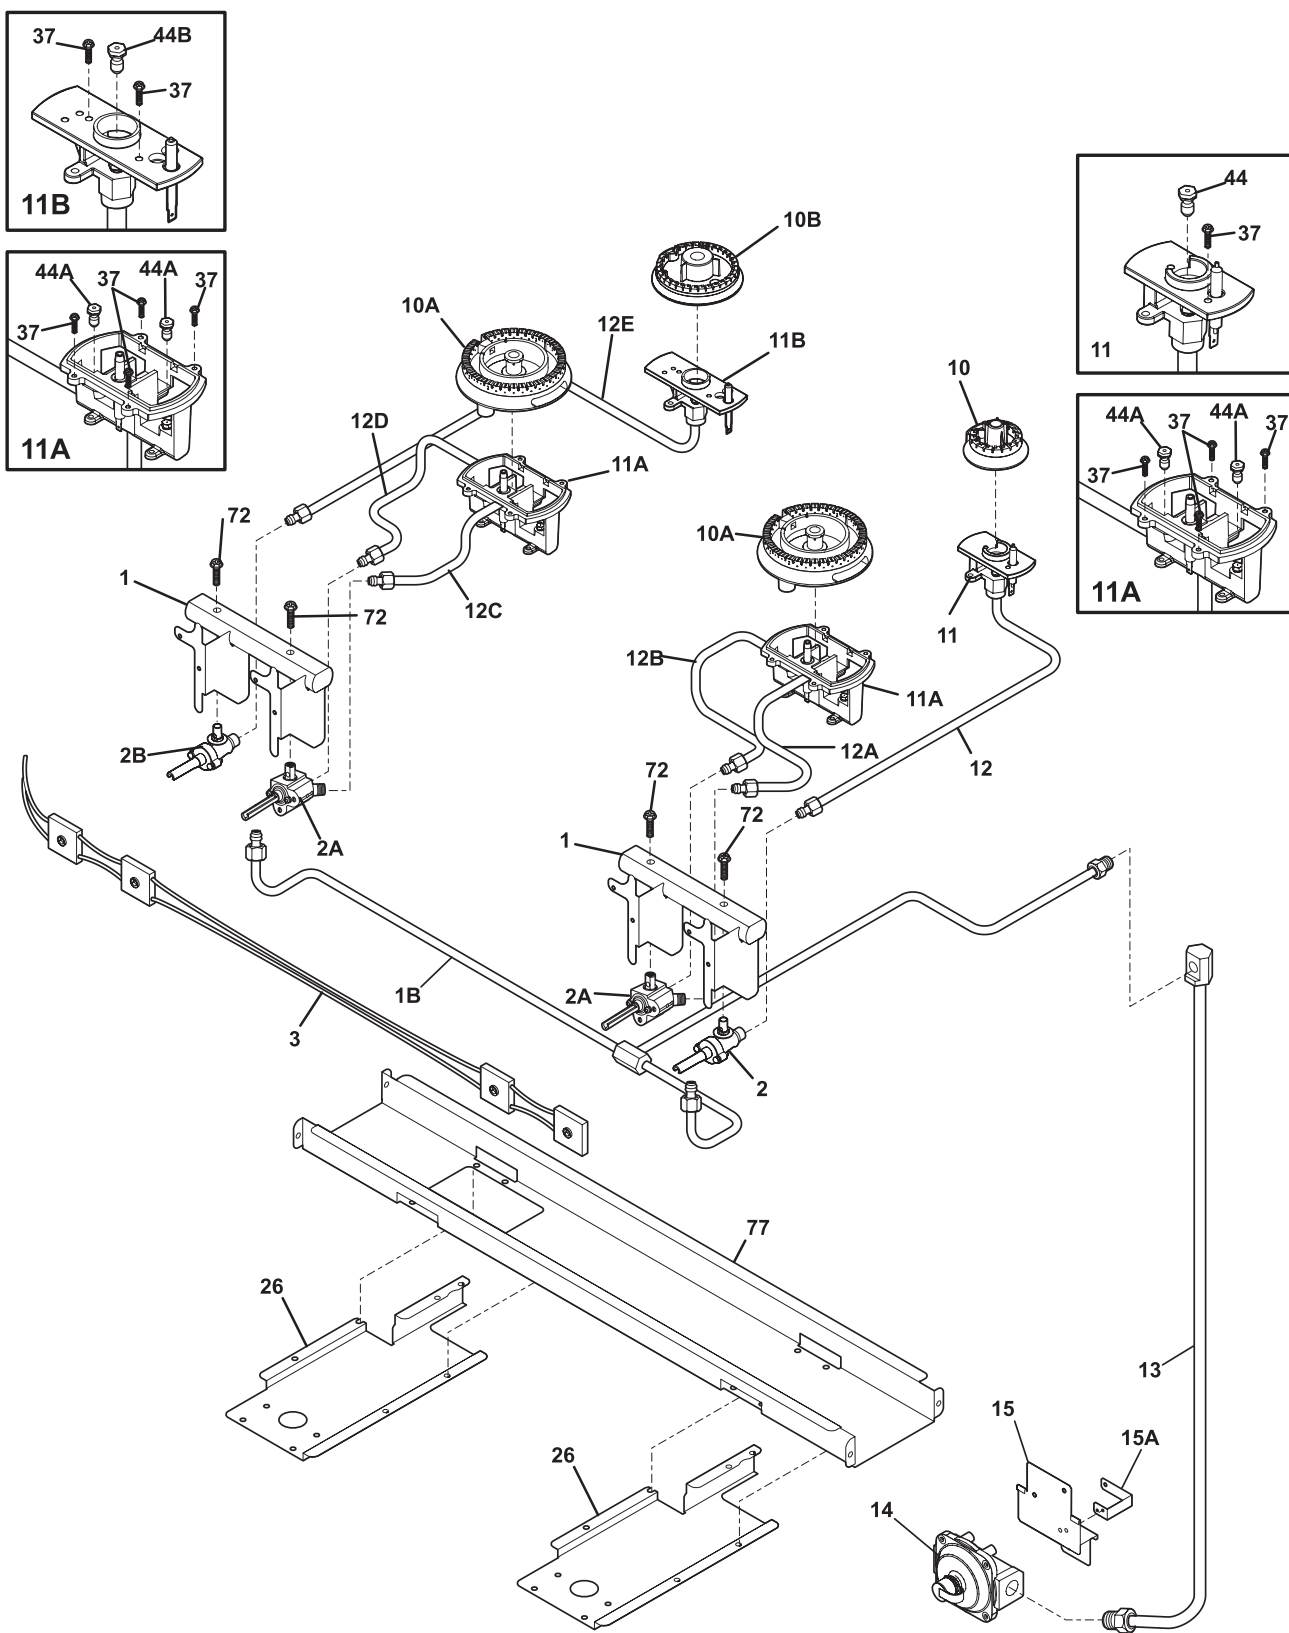


BRE30DF74GPS1

BURNER

POS. NO	PART NO.	DESCRIPTION
1 #	318357801	Manifold, (2)
1B	318305402	Tube, manifold, 3/8, interconnect
2 #	316520700	Valve, burner, 5K
2A #	316412510	Valve, top burner, 18K, dual port
2B #	316520703	Valve, burner, 14K
3 #	318232634	Wiring Harness, w/igntr switch
3*	5303311306	Screw, 8-18 x 0.375, (8)
10 #	316510800	Burner, sealed, 5K
10A#	316525400	Burner, sealed, dual, 18K
10B#	316511200	Burner, sealed, 14K
11 #	316524800	Ignitor/orifice assy., top burner, 5K, w/holder
11A#	316525100	Ignitor/orifice assy., top burner, 18K, w/holder
11B#	316525000	Ignitor/orifice assy., top burner, 14K, w/holder
12 #	318366727	Tube, burner, RH rear, 5K
12A#	318366731	Tube, 18K burner, RH front
12B#	318366732	Tube, 18K burner, RH front
12C#	318366729	Tube, 18K burner, LH front
12D#	318366730	Tube, 18K burner, LH front
12E#	318366728	Tube, 14K burner, LH rear
13	318360600	Tube, regulator, to manifold
14 #	318122708	Regulator, pressure
15	318376100	Bracket, regulator
15A	318376200	Bracket, regulator, support
26	318363800	Bracket, channel mtg, (2)
37	316518100	Screw, ignitor assy mt, 6-32 x .62
44	316523504	Orifice, top burner, 5K
44A	316523508	Orifice, top burner, 18K
44B	316523506	Orifice, top burner, 14K
72	316215600	Screw, valve mtg., 1/4 - 20
77	318355502	Bracket, channel mtg.
* #	318199756	Wiring Harness, ignitor
*	318186917	LP Conversion Kit
*	5303211311	Screw, 8 x 0.500


BODY

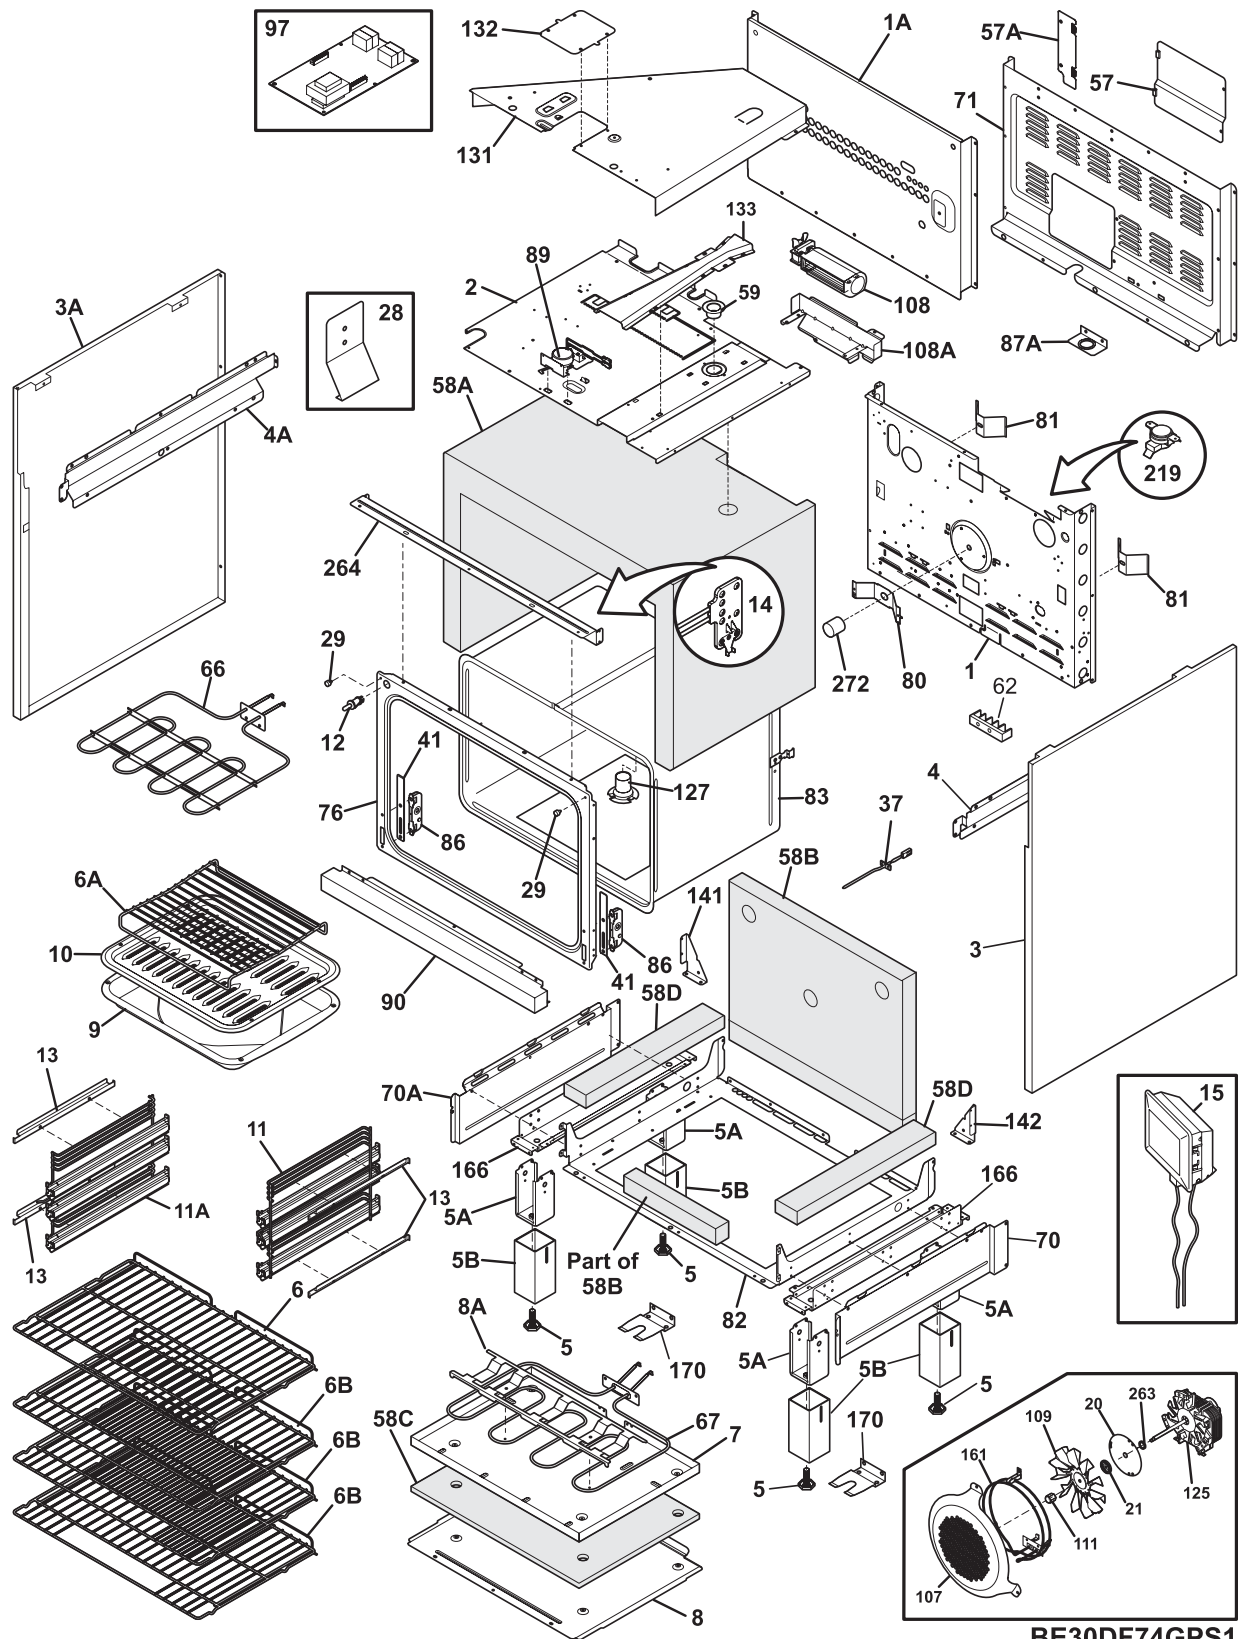

BE30DF74GPS1

BODY


POS. NO	PART NO.	DESCRIPTION
1	318259222	Back, main
1A	318353100	Panel, back, upper
2	318258922	Shield, insulation, upper
3	318352702	Panel, side, stainless, LH
3A	318352703	Panel, side, stainless, RH
4	318356002	Panel, upper side, RH
4A	318356003	Panel, upper side, LH
5	318175506	Screw, leveling
5A	318368800	Bracket, leveling leg, (4)
5B	318352404	Cover, leveling leg, (4)
6	318240103	Shelf, oven, fixed
6A	318365800	Rack, broiler pan
6B	318345404	Shelf, oven, extendable, (3)
7	318297302	Box, bake element
8	318359500	Panel, service
8A	318313601	Bracket, bake element
9	318138801	Pan, broiler
10	318126401	Insert, broiler pan
11	318240014	Glide & Support assy, oven shelves, RH
11A	318240015	Glide & Support assy, oven shelves, LH
12	316445501	Switch, oven light, door frame
13	318603913	Bracket, ladder mtg., (4)
14	318903401	Switch, rack sensing
15	318241002	Lamp, oven, (2), halogen
20	318389400	Plate, retainer
21	318389000	Seal, ring
28	318369301	Bracket, side panel, (2)
29	318147411	Bumper, (2)
37 #	316217002	Probe, oven temp
41	318366601	Spacer, front frame
57	318362600	Panel, service
57A	318394600	Panel, service
58A	318386100	Insulation, oven wrapper
58B	318285079	Insulation, oven back
58C	318294912	Insulation, bake element
58D	318372001	Insulation, door, 20.5 x 2.375, (2)
59	318072577	Duct, oven vent
*	5303311333	Screw, 8-32 x 3/8
62	5303935061	Terminal Block Kit
62*	5303212739	Plate-ground strap
62*	5303323139	Screw, 10-24 x 0.906
62*	5303323144	Nut, 10-32
66 #	318255806	Element, broil, 4000W
67 #	318254903	Element, bake, 2500W, 8 pass
70	318302710	Shield, insulation, right, (2)
70A	318302711	Shield, insulation, left, (2)
71	318300903	Panel, cover
76	318056232	Front, oven
80	5303320846	Plate, oven mtg
81	318192400	Spring, oven
*	5303323129	Screw, 8 X 0.750

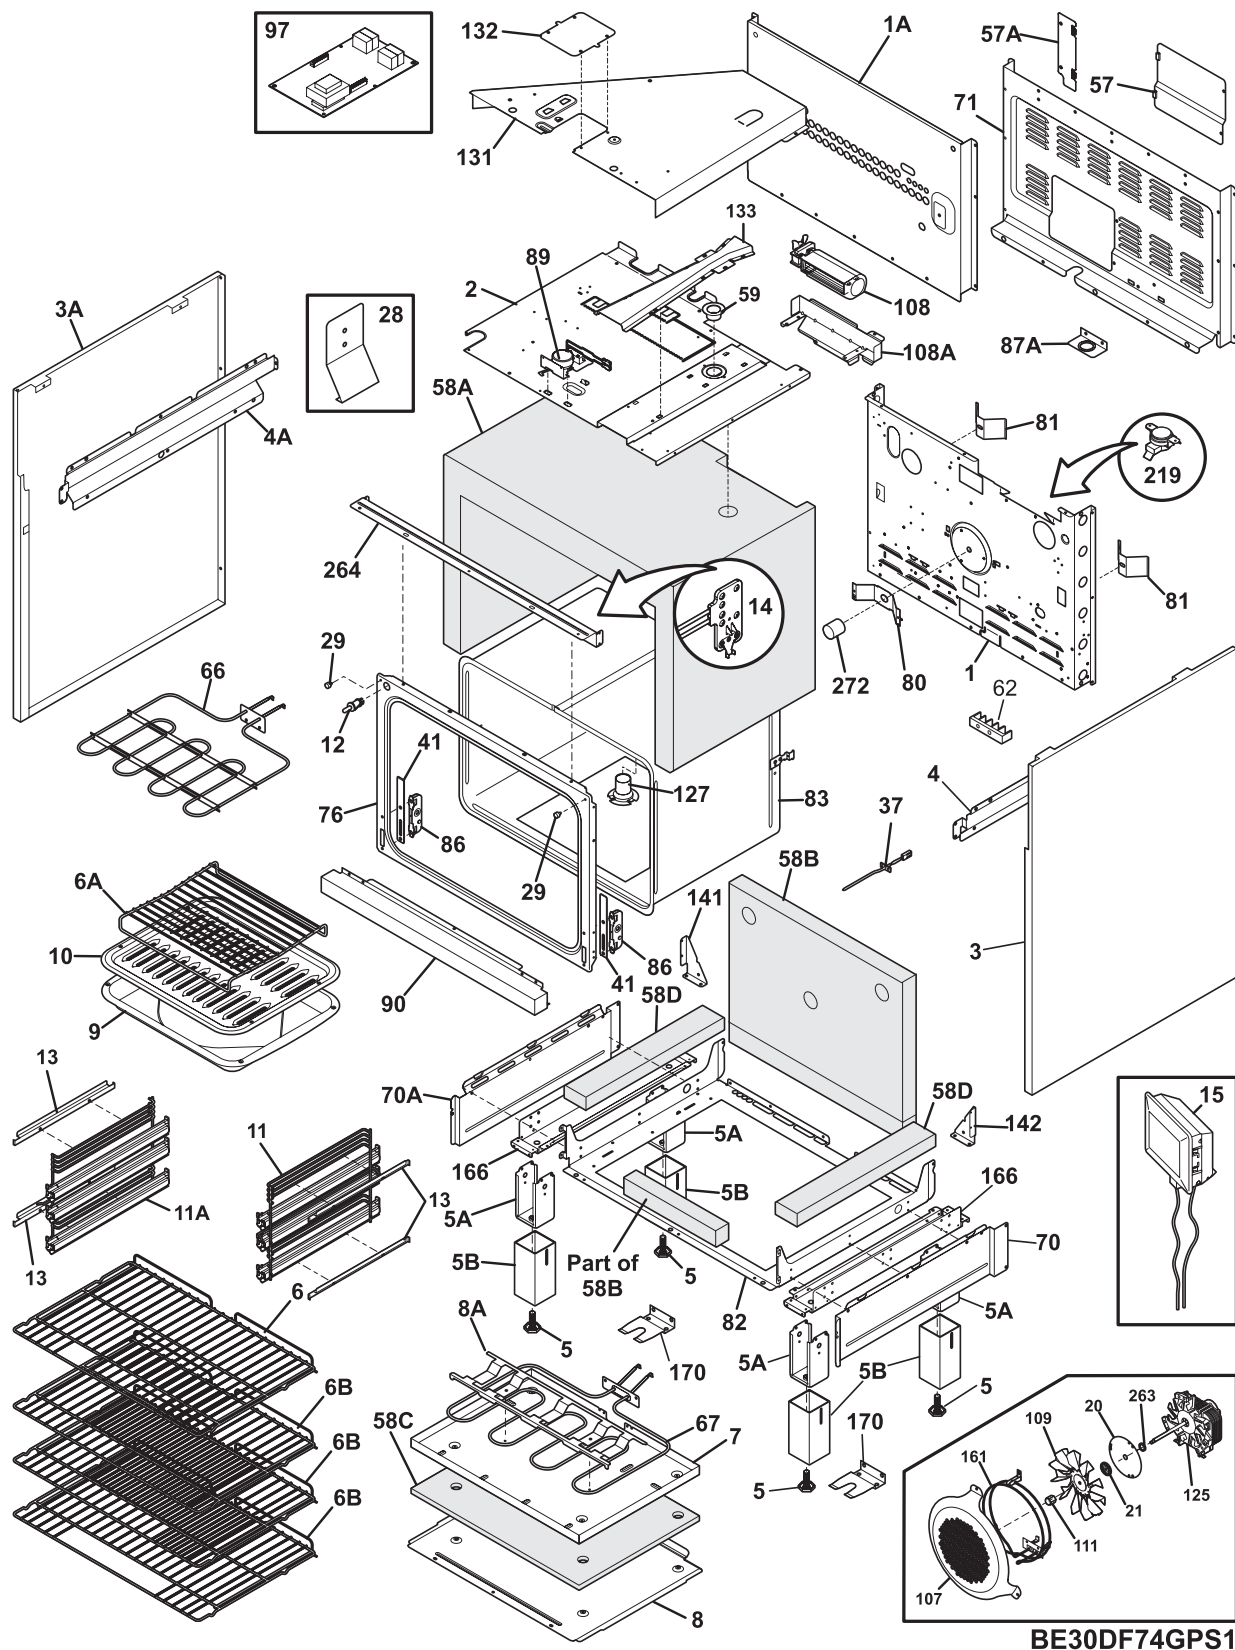BODY

BODY

POS. NO	PART NO.	DESCRIPTION
82	318258715	Shield, insulation, lower
*	08002868	Screw, 10-24 x 0.500, probe, thrm brkt, shield, drwr, box
83	318261428	Liner, oven assy
86	318241406	Receptacle, hinge, (2)
86*	5304461333	Screw, 10-32 x 17/32, (4)
87A	318111805	Plate, cord set mtg
89 #	318261211	Motor, latch assy
89*	318370338	Wiring Harness, latch
*	5303325978	Screw, shoulder head, 8-18 X 1/2
90	318355001	Trim, bottom, stainless
97	316455704	Board, power, relay
107	318906601	Cover, fan
108#	318073018	Motor, blower
108A	318251300	Bracket, fan support
109	316136400	Blade, fan
111	316136600	Nut, fan retainer
125#	316415800	Motor, fan
127	318357001	Adapter, vent tube
131	318272902	Box, vent
132	318003000	Plate, shield
*	5304436875	Screw, 8-18 X 1/2, black
133	318347800	Chimney
141	318368400	Bracket, reinforcement, RH
142	318368401	Bracket, reinforcement, LH
161#	318255506	Element, convection, 2500 W
166	318352501	Bracket, leveling leg, (2), reinforcement
170	318335701	Anti-tip & accessories
219#	318003631	Thermostat, safety, (2)
*	3201861	Screw, 6 x 0.375, (4)
263	316136500	Washer, flat
264	318257723	Trim, oven, black, front
272	318249403	Tube, protector
* #	318370366	Wiring Harness, main
* #	318231859	Harness, wiring, power
*	318235300	Connector assy., w/3 lugs, & instructions
*	318165800	Spacer
*	3051050	Screw, shoulder
*	08016432	Screw, truss head, 8-18 x 0.375
*	5303211311	Screw, 8 x 0.500
*	5303300265	Screw, 8-18 X 1/2, (4)
*	5304415832	Screw, 8-18 x 0.406

TOP

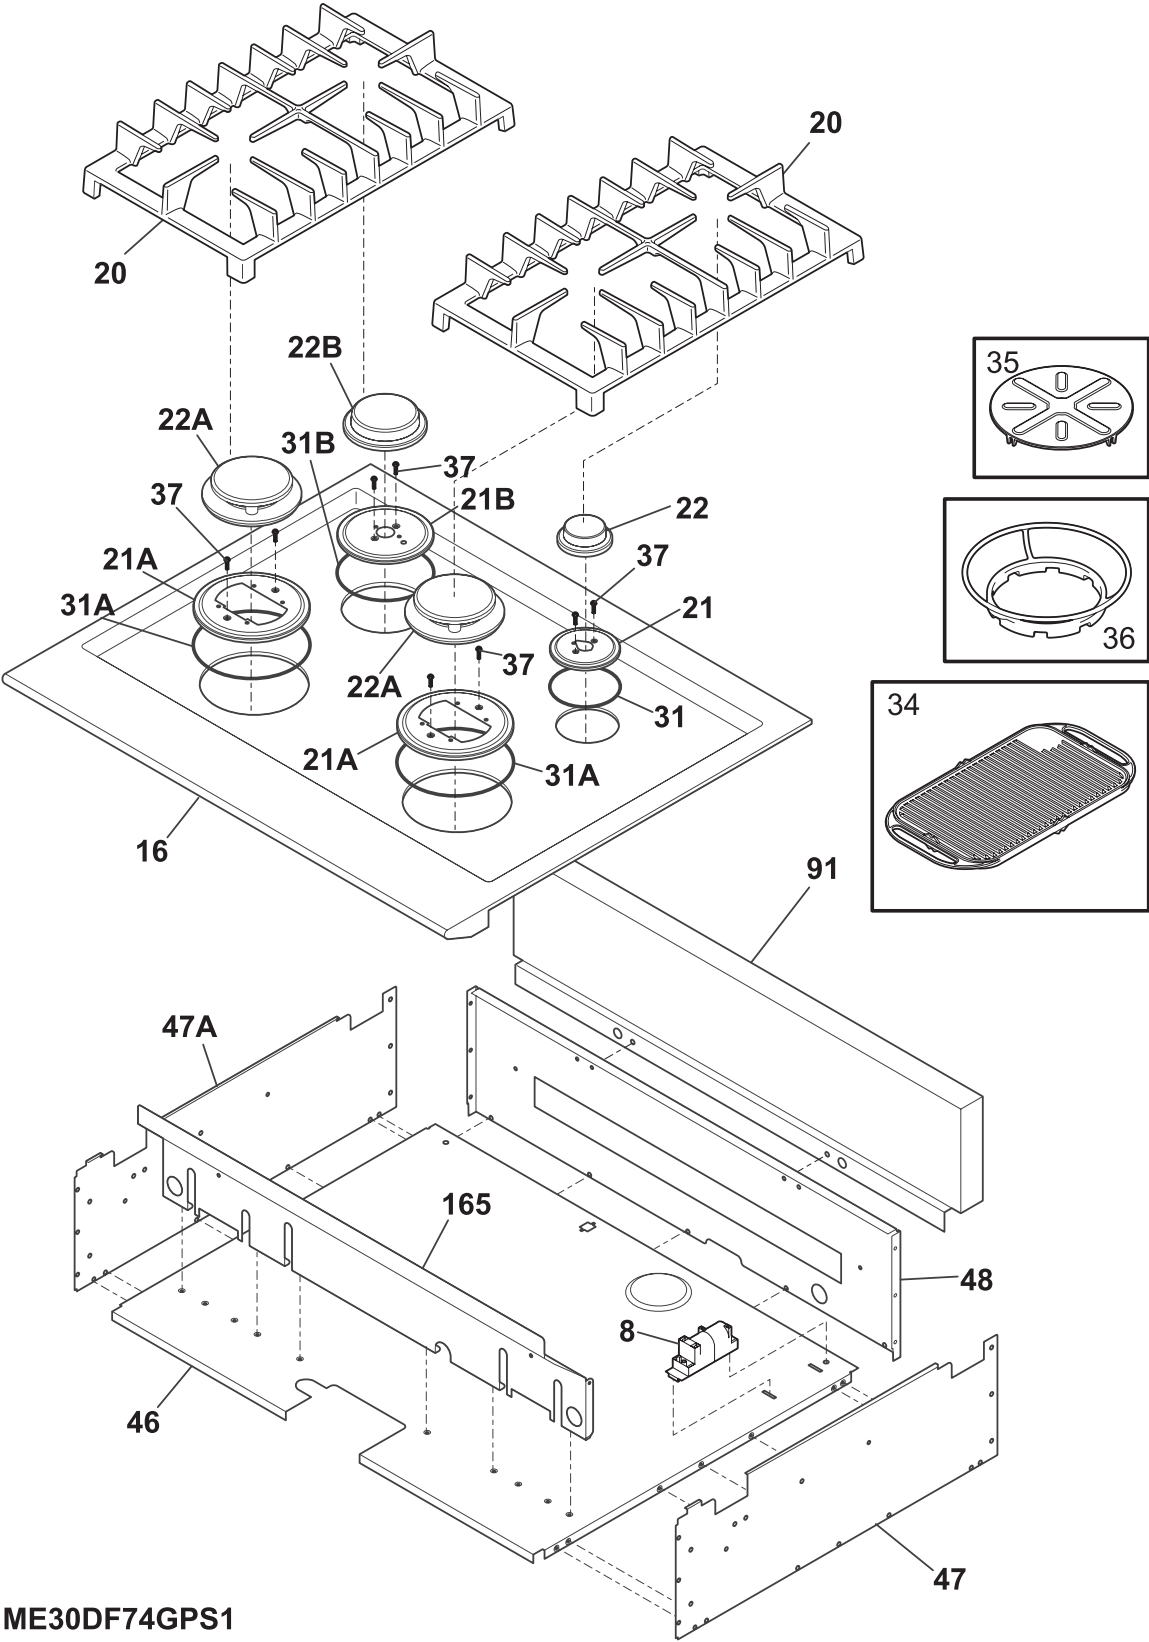


ME30DF74GPS1

TOP

POS. NO	PART NO.	DESCRIPTION
8 #	316135701	Module, spark
16	318185218	Main Top Assy, frame/glass, stainless/black
20	318361403	Grate, top burner, black, (2), double
21	316514800	Skirt, 5K burner, black
21A	316515100	Skirt, 18K burner, black
21B	316515000	Skirt, 14K burner, black, (2)
22	316510902	Cap, 5K burner, black
22A	316511502	Cap, 18K burner, black, (2)
22B	316511302	Cap, 14K burner, black, (2)
31	316515200	Seal, 5K burner
31A	316515203	Seal, 18K burner, (2)
31B	316515202	Seal, 14K burner, (2)
34	318251600	Griddle
35	318254200	Simmer Plate
36	318254300	Support, WOK
37	316240600	Screw, assy mtg, ignitor/orifice
46	318242910	Panel, bottom
47	318241706	Panel, side, RH
47A	318241707	Panel, side, LH
48	318241810	Panel, rear
91	318353011	Backsplash, stainless
165	318355101	Deflector, heat
*	318163602	Cleaner, stainless steel
*	318163601	Cleaner-cooktop
*	5303211311	Screw, 8 x 0.500

DOOR

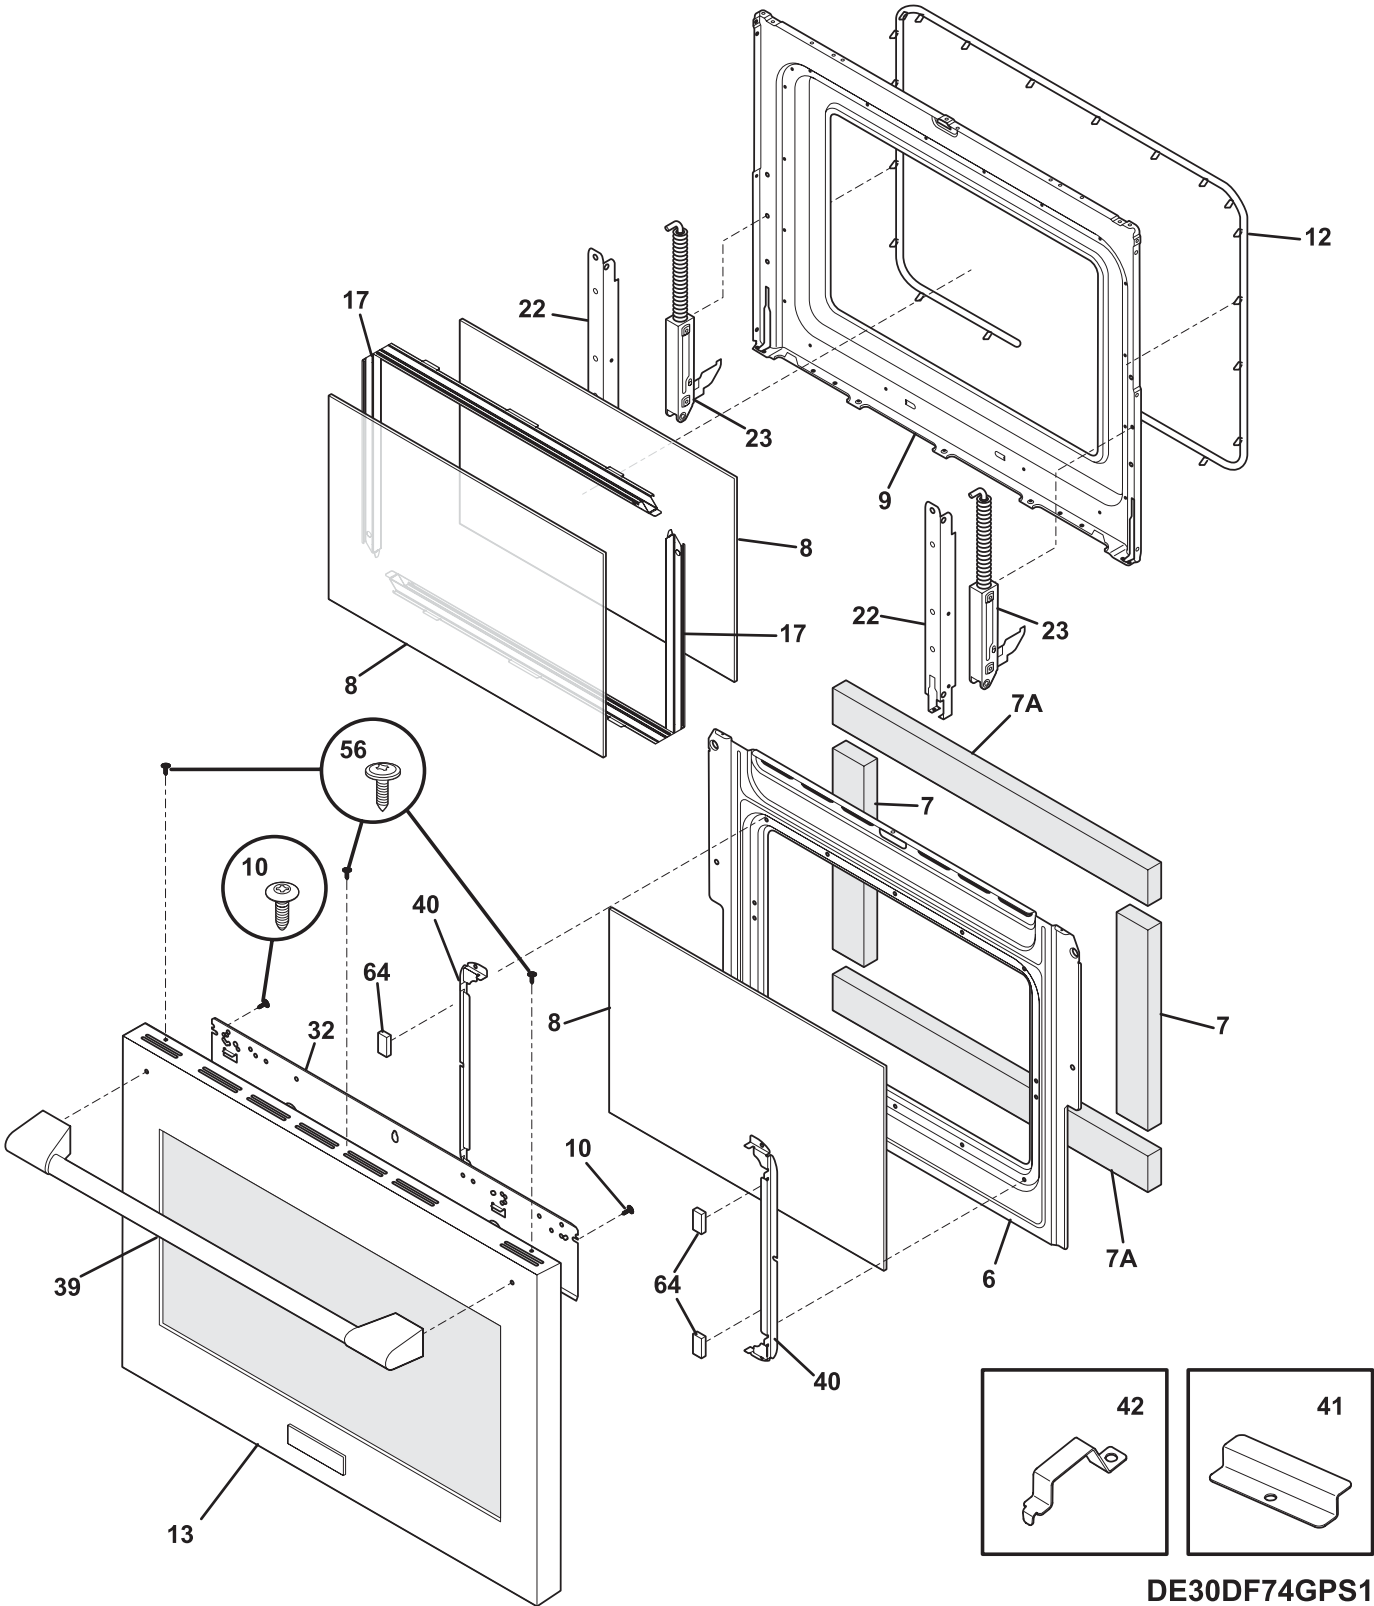

DOOR

POS. NO	PART NO.	DESCRIPTION
6	318260523	Baffle, door
7	318372000	Insulation, door, (2)
7A	318372002	Insulation, door, (2)
8	316117500	Glass, oven door, heat barrier
9	318259633	Liner, oven door
10	5304400794	Screw, handle mtg, 10-32 x 3/4
12	318053131	Gasket, oven door seal
13	318344006	Door Assmebly, stainless/glass, w/badge
17	318264710	Spacer, glass, (2)
22	318353803	Retainer, hinge
23	318244300	Hinge Assy
32	318057202	Panel, heat deflector, door handle
39	318392410	Handle, door
40	318242702	Bracket, glass holder, upper door, (2)
41	318370600	Bracket, glass retainer, (2)
42	318382301	Bracket, glass retainer, (4)
56	5304436875	Screw, 8-18 X 1/2, black
64	318165800	Spacer
*	316433603	Label, anti-tip
*	318163602	Cleaner, stainless steel
*	5304415832	Screw, 8-18 x 0.406

WIRING DIAGRAM

